



1)

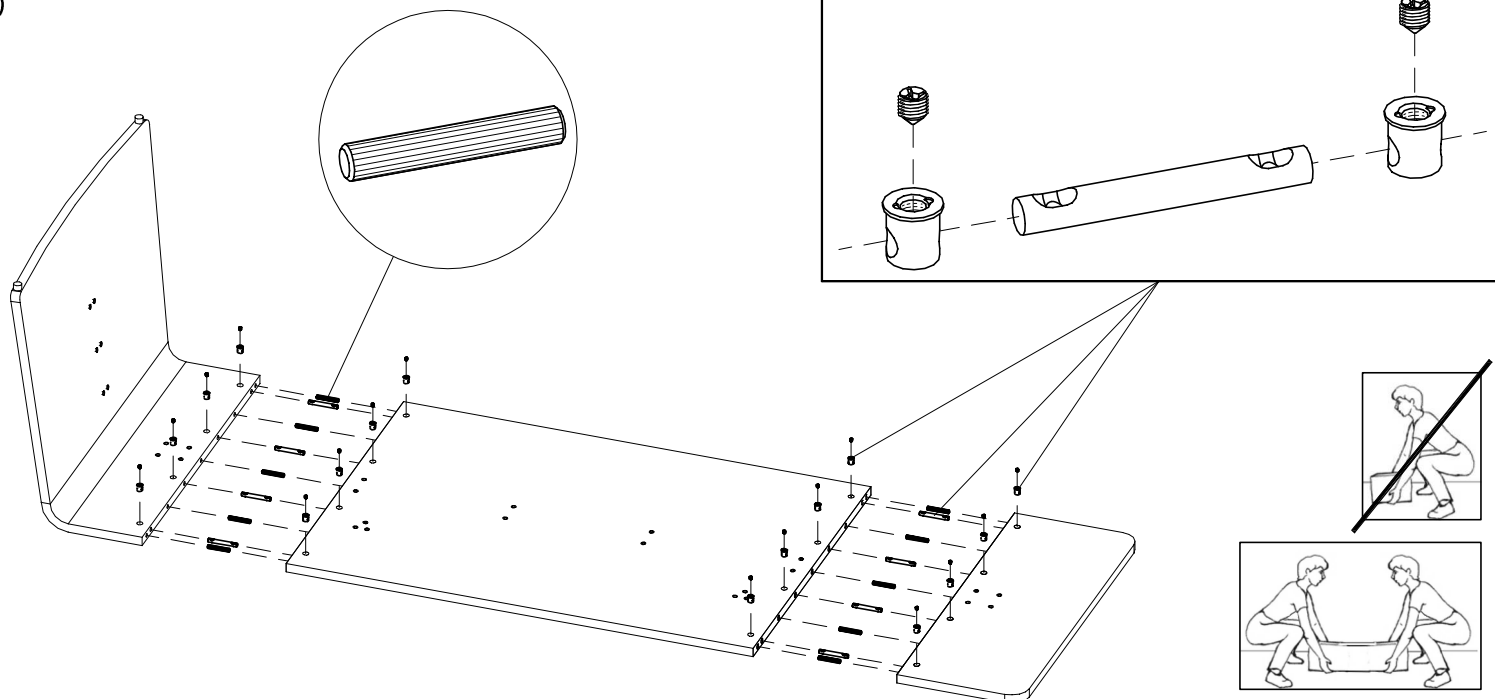


2)

Tighten the screws in the following order:  
A, B, C, D, E  
only after having placed all of them.  
Then tighten the 4 bolts with the 4 nuts


N.4

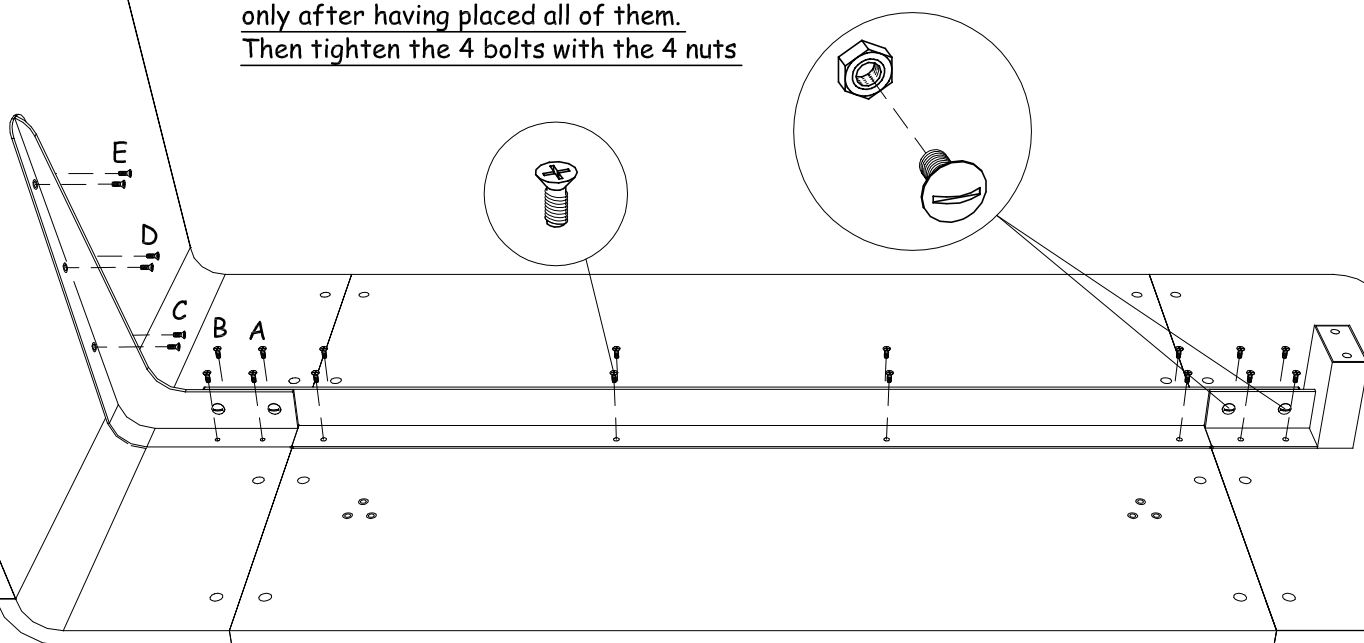

3)

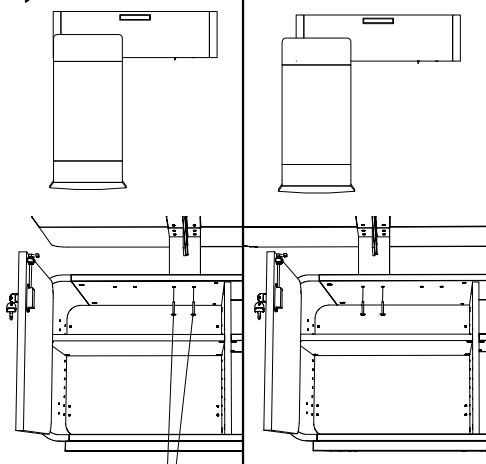

4)

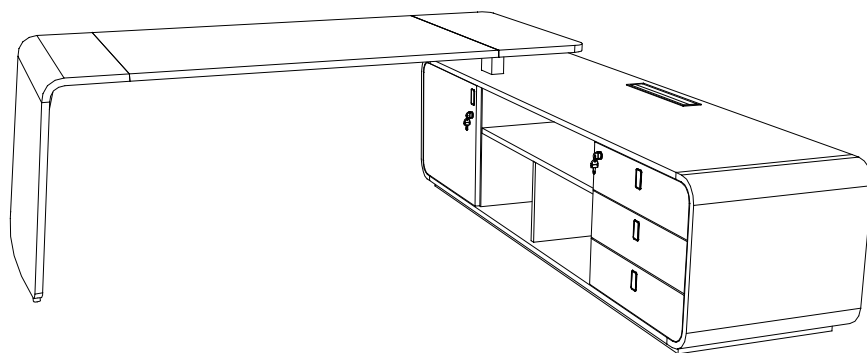

Description:

ASSEMBLY CHART  
"SESTANTE" RIGHT HAND DESK WITH SELF  
SUPPORTING SERVICE UNIT

Code: 9SAL01.0002+9SBN21.0002

Date: 12/01/2010

Executed by:

Canonici Roberto

Approved by:

Canonici Roberto

